
## 601 Seibal

## **Washing Machine Instructions**

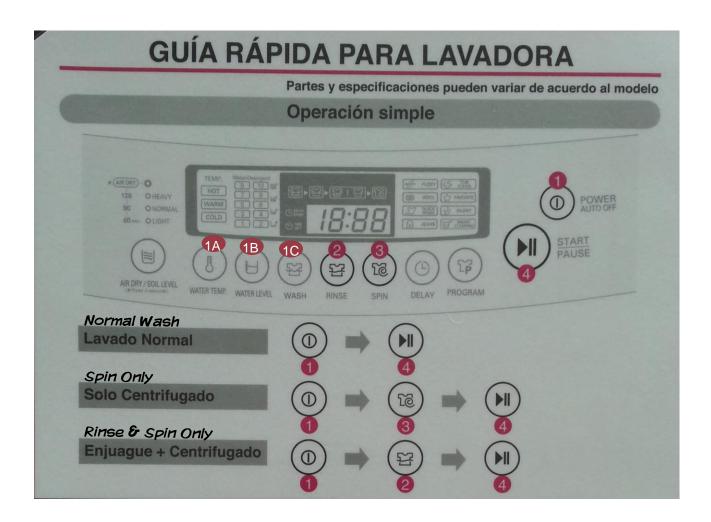

## **Recommended Usage:**

- 1 power on
- 1A set water temp. by pushing button to reach desired option
- 1B set water level by pushing button to reach desired option
- 1C wash garments
- 4 start